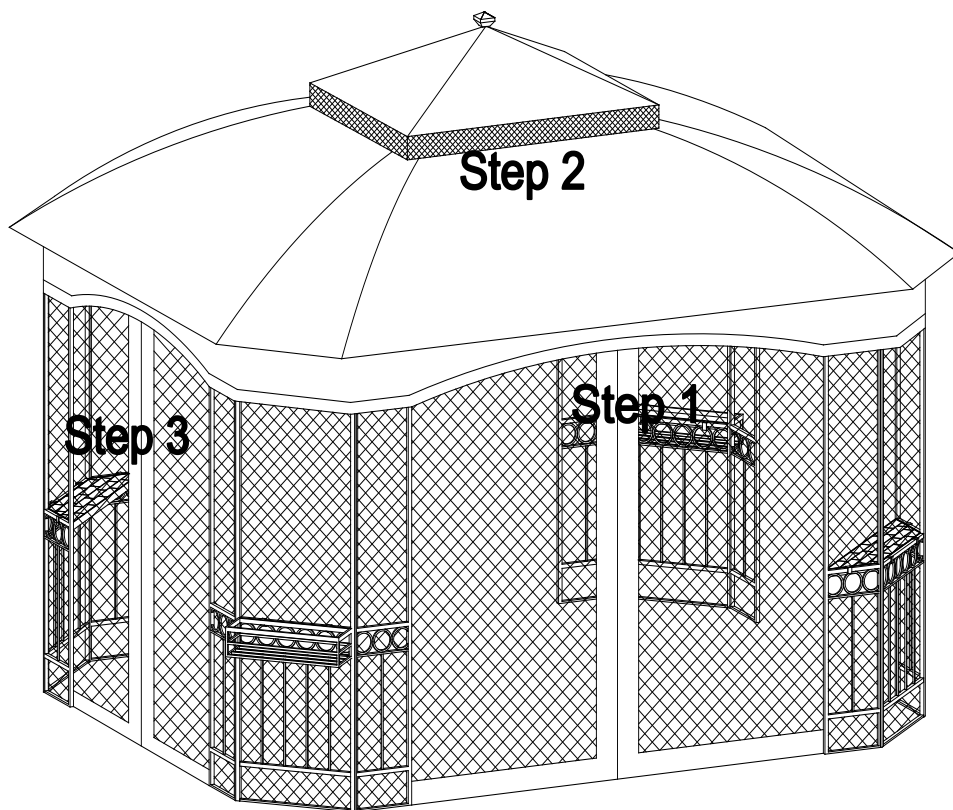
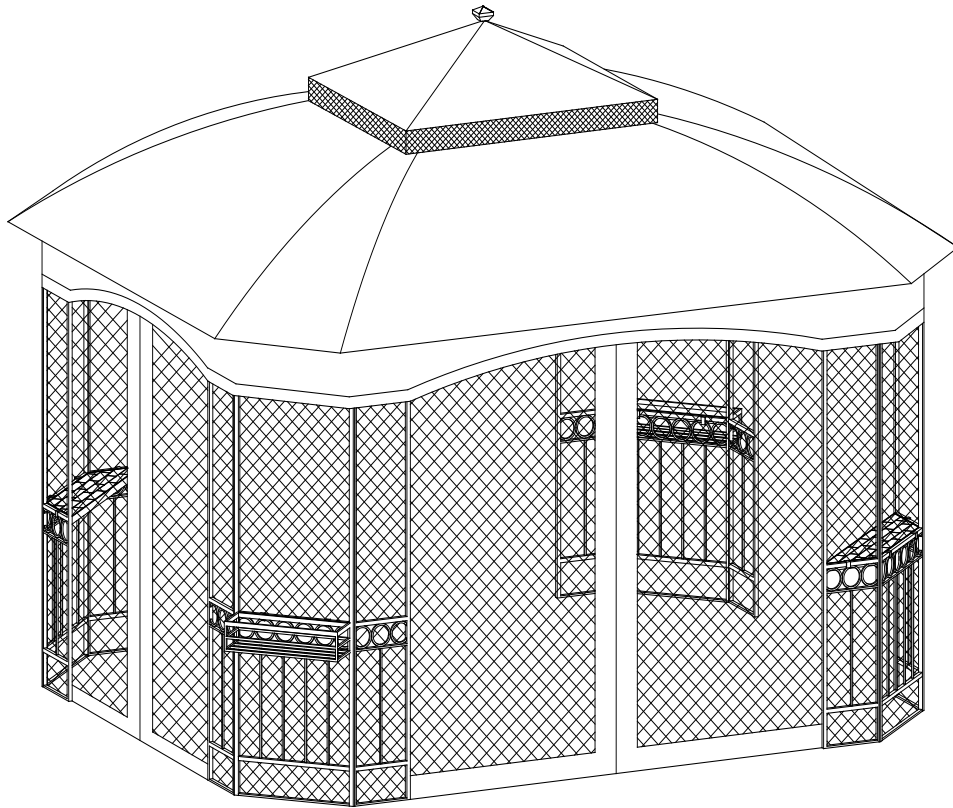























Patrice Gazebo Assembly Instruction

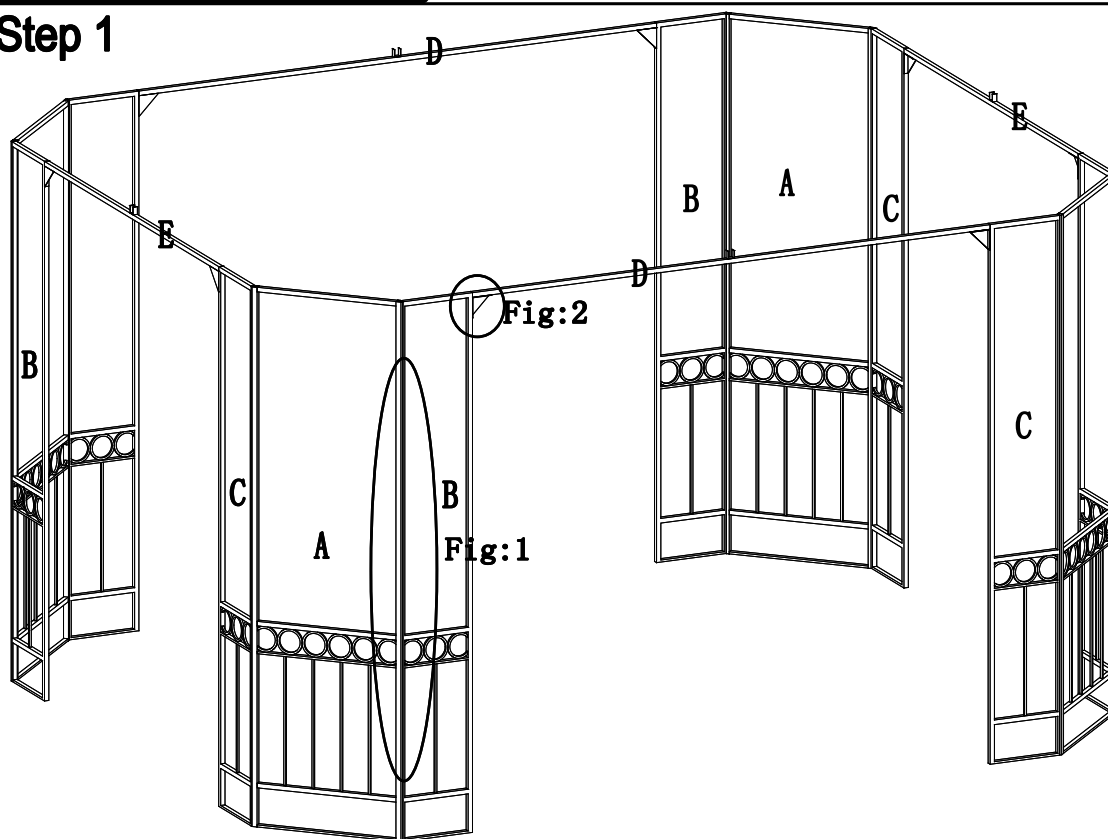


Parts List

Big screen	A	4	
Left small screen	B	4	
Right small screen	C	4	
Long beam	D	2	
Short beam	E	2	
Down tube	F	8	
Long beam	G	4	
Short beam	H	4	
Long center beam	I	2	
Short center beam	J	2	
Top tube	K	4	
Big top connector	L	1	
Small top pole	M	4	
Small top connector	N	1	
hook	O	1	
poppyhead	P	1	
Small canopy	Q	1	
Big canopy	R	1	
Mosquito netting	S	1	
Flower basket	T	2	
Slate shelf	U	2	

Hardware Pack 1

Step 1



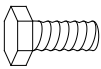


AA	Bolt M6X20	32PCS	
BB	Flat washer M6	32PCS	
W	Wrench M6	1 PC	

Fig:1

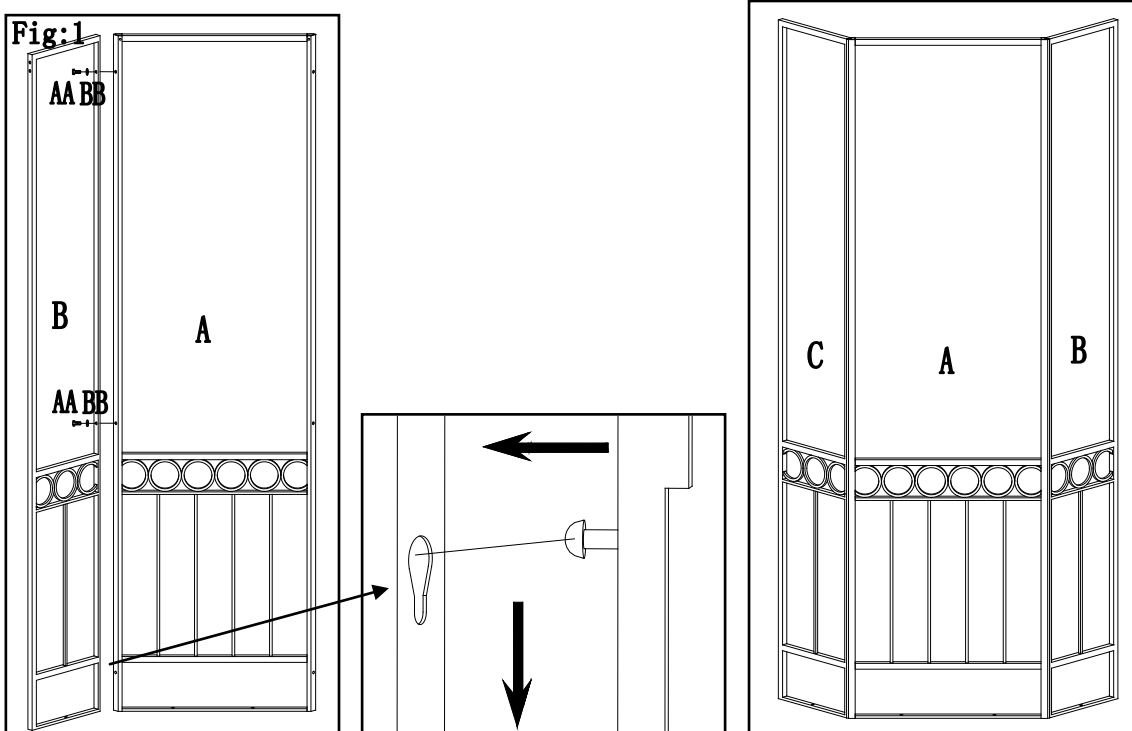


Fig.1: Insert the head of the left small screen (B) into the hole of the big screen(A), then pull down the left small screen (B) to keep B and A in the same level, and lock them tightly with bolt(AA) and washer(BB). Attach the right small screen(C) to the big screen(A) in the same way.

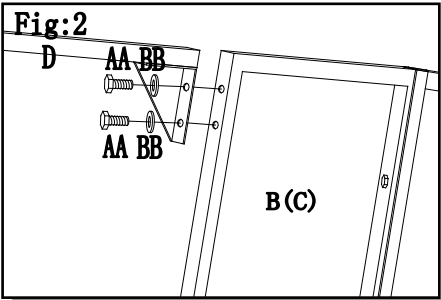
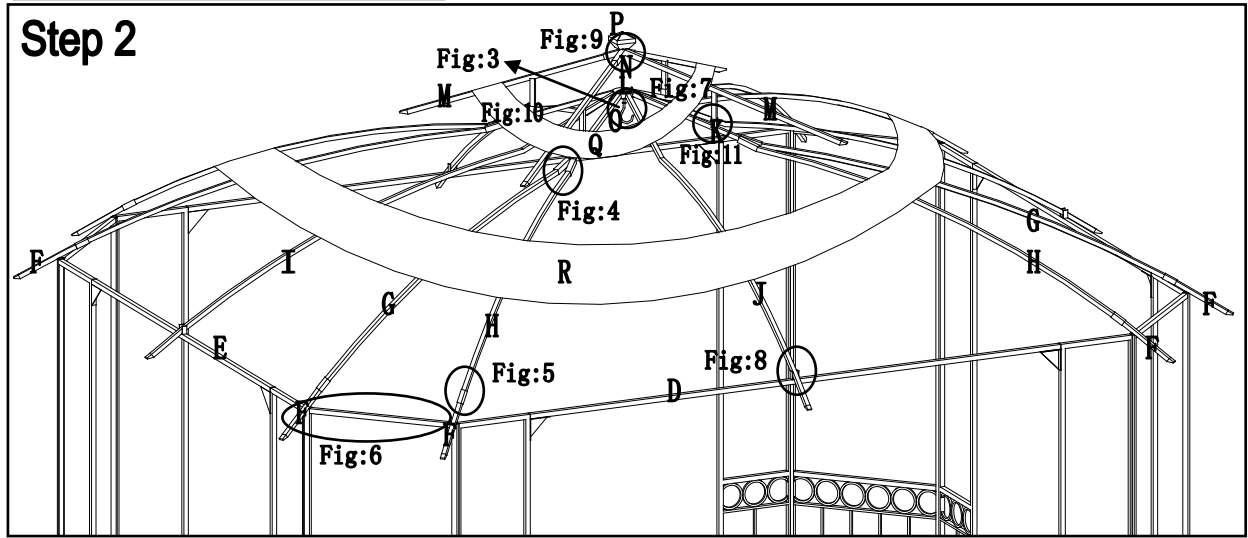

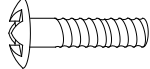



Fig.2: Attach the long beam (D) to the small screen B(C) with bolt(AA) and washer(BB). Attach the short beam(E) in the same way.

Hardware Pack 2



BB	Flat washer M6	8PCS	
CC	Bolt M6*35	4PCS	
DD	Nut M6	4 PC	

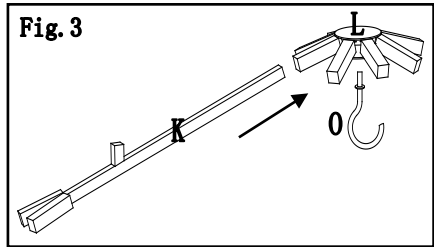


Fig.3: Insert the hook (O) into the big top connector(L),then insert the top tube(K) into the big top connector(L).

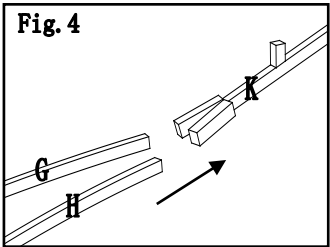


Fig.4: Insert the long beam (G) and short beam (H) into the top tube (K).

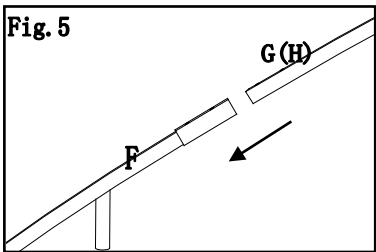


Fig.5: Insert the long beam (G) and the bottom side of short beam into the down tube (F).

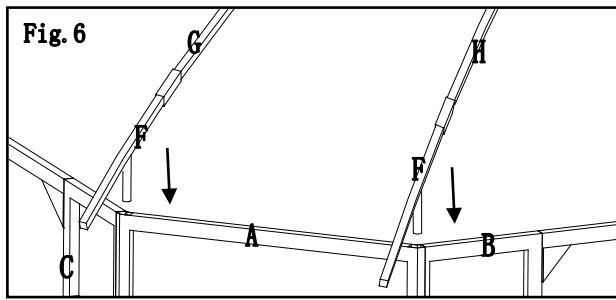


Fig.6: Insert the down tube (F) into the big screen (A), as shown in the picture , G corresponding C,H corresponding B.

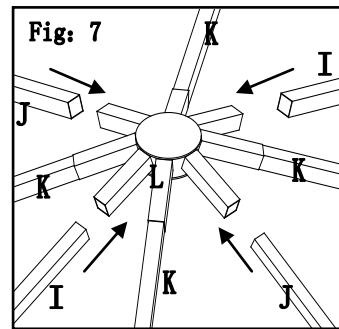


Fig.7: Insert the long center beam (I) and short center beam (J) into the big top connector (L).

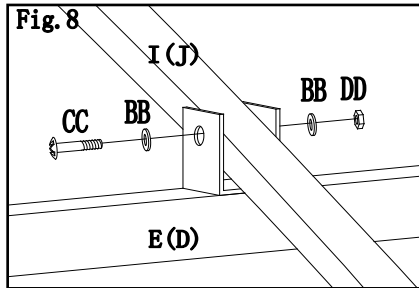


Fig.8: Attach the long center beam (I) and the bottom of the short center beam to the short beam (E) and long beam (D) with bolt (CC) 、 washer (BB) and nut (DD).

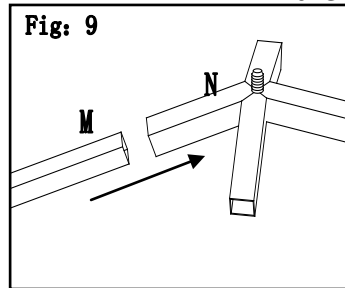


Fig.9: Insert the small top pole (M) into the small top connector (N).

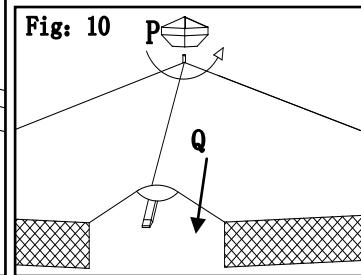


Fig.10: Put the small canopy (Q) onto the assembled small top, secure the four corners, attach the poppyhead (P) onto the small top connector.

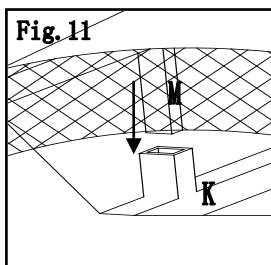




Fig.11: Put the big canopy (R) on the big top, do not unfold, then insert the assembled small top into the top tube (K).

Hardware Pack 3

EE	Mosquito netting loop	PCS	
FF	Ground stake	12PCS	

Step 3

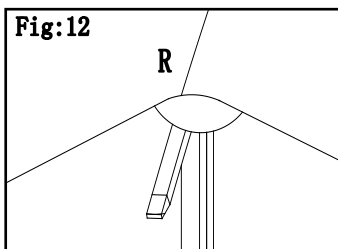
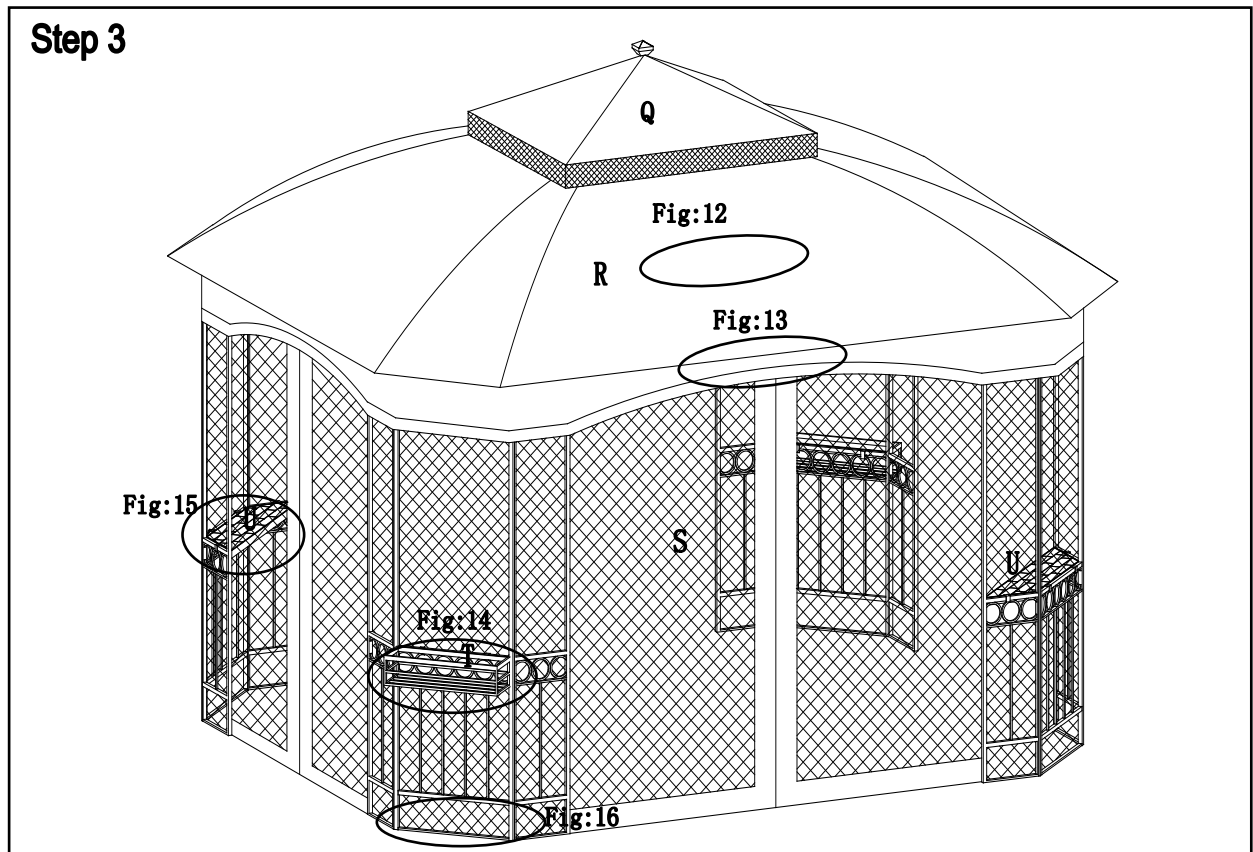


Fig:12: Open the big canopy and secure the corners.

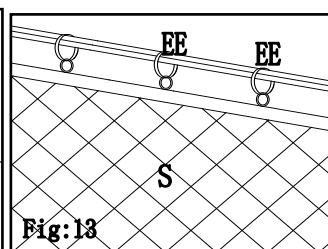


Fig:13: Hang the mosquito net (SS) on the poles with mosquito netting loop (EE).

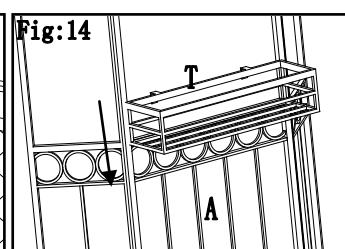


Fig:14: Hang the flower basket (T) on the big screen (A).

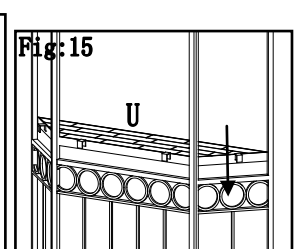


Fig:15: Put the slate shelf (U) on the screen.

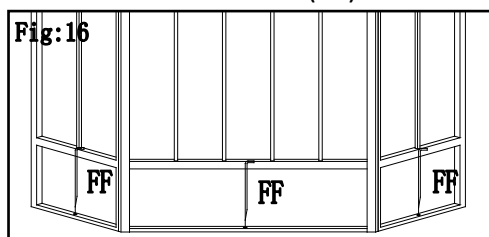


Fig:16: Secure the gazebo with ground stake (FF).